

## INSTALLATION INSTRUCTIONS

### TWO HANDLES KITCHEN FAUCET W/SPRAY


廚房龍頭(附噴槍)安裝說明

PATENT NUMBER:



專利號碼:  
ZL 2009 2 0169783.0  
M371820

**CAUTION : Risk Of Product Damage.**  
注意：為增加產品使用壽命，請依說明清潔供水管路。  
a./ Turn the angle stops (water suppliers) on and run for 1 minute before connect supply hose (flexible hose) to faucet body.  
或 b./  
安裝編織管之前，先把供水開關全開排水一分鐘。或 b./  
b./ Connect and tighten the faucet and angle stops with supply hose (flexible hose) to finish installation, then remove the aerator, fully turn on the hot and cold water valves on faucet and run for 1 minute, then turn off the water and reinstall the aerator.  
把龍頭、供水開關及編織管接好並鎖緊之後，把起泡器移開，把熱水及冷水全部轉開一分鐘，然後把水關掉再把起泡器裝回去。

1. Drill 4 holes on appropriate position. (Fig. 1)  
在適當的位置鑽4個孔。(圖.1)
2. Position Faucet Body on the deck for fixture, then tighten Nut securely, and screw Diverter onto Faucet Body.(Fig. 2)  
從龍頭本體下方依序套入螺帽，確認龍頭方向位置後，鎖緊螺帽固定龍頭，再將切換閥鎖緊固定於龍頭本體即可。(圖.2)
3. Remove Valve-Nuts from Valves before installing, insert Valves from underside through the holes of Deck and fasten Valve-Nuts, then align Valves so that the tee ends(outlet) face to Spout and secure Valves by tightening Lock-Nuts.(Fig. 2)  
從閥體上將閥體螺帽拆下，把閥體從檯面下方穿過孔並且鎖上閥體螺帽，然後將閥體的出水口端面向出水口並用固定螺帽鎖緊閥體。(圖.2)

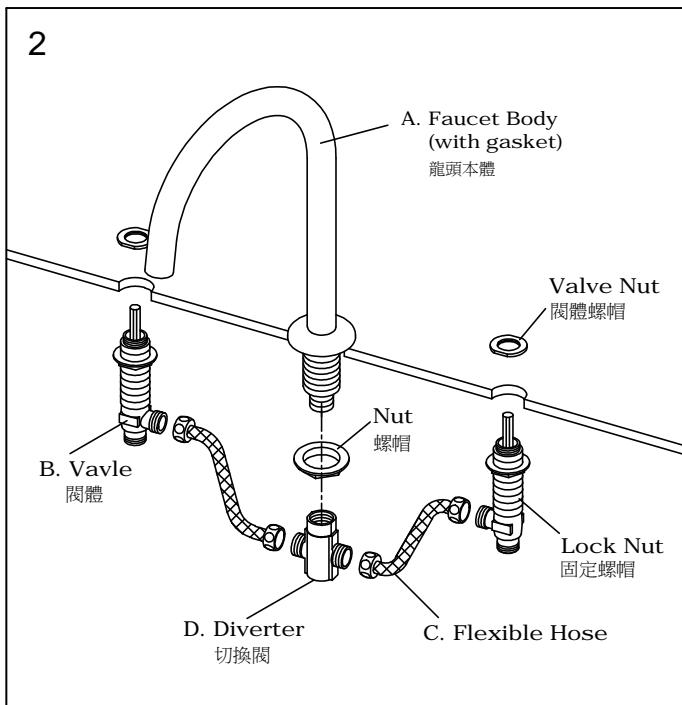

4. Tighten the foundation of Handle.(Fig. 3)  
將把手的基座鎖緊。(圖.3)
5. Install Connector with filter onto the outlet of Angle Stop first, then connect Flexible Hoses from Valves to Spout and Connector with filter.(Fig. 3)  
先連接過濾接頭到進水開關，然後連接不銹鋼軟管從閥體到出水口及過濾接頭。(圖.3)
6. Remove the Nut from the Spray Escutcheon first, then insert the Spray Escutcheon into the deck hole and tighten the Nut to secure the Spray Escutcheon in place. (Fig. 4)  
將噴槍底座上的螺帽鬆開，然後將噴槍底座穿過檯面洞口，鎖緊螺帽固定噴槍底座。(圖.4)
7. Assemble the Spray with Spray Hose, then insert the Spray Hose through the Escutcheon and connect the Spray Hose to Faucet Hose-outlet, tighten it. (Fig.4)  
組合噴槍軟管與噴槍，並連結鎖緊噴槍軟管與龍頭小軟管接頭。(圖.4)

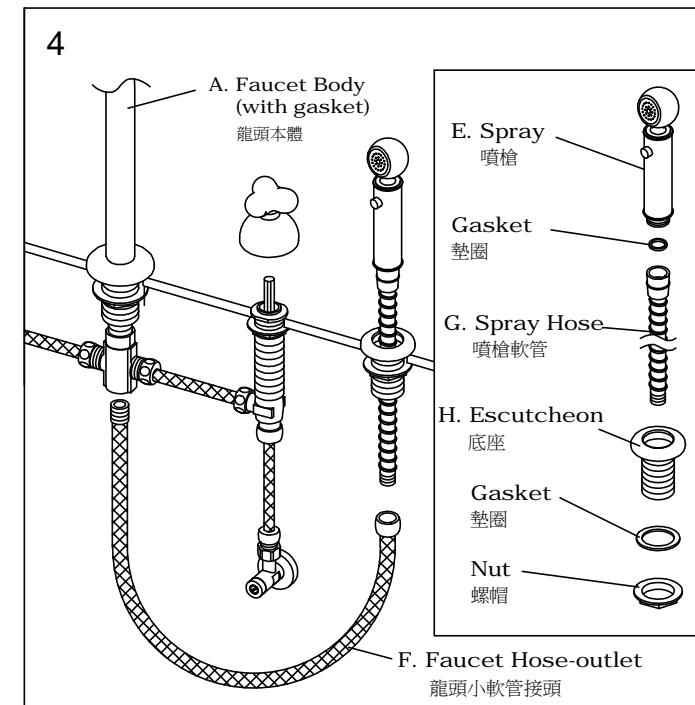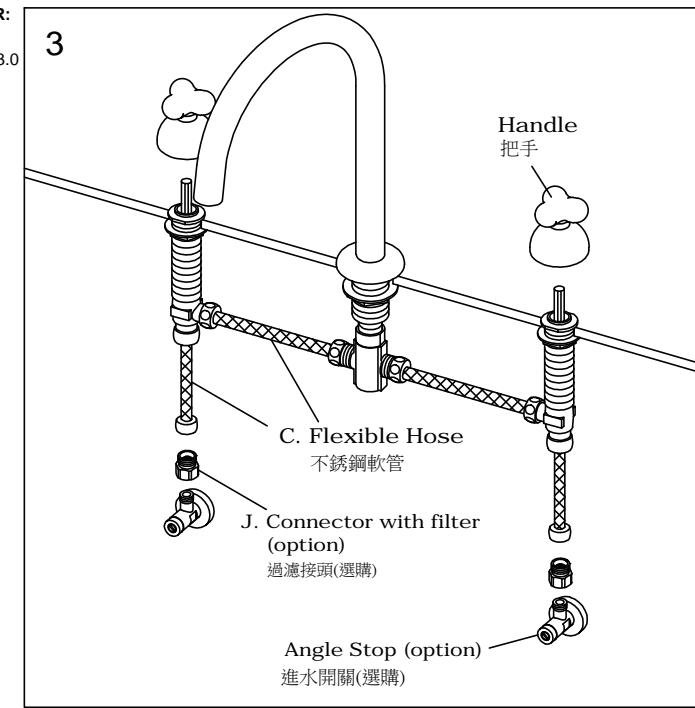

## FIXING CONTENTS

組配件內容

5":Ui Wh6cXm" % (with gasket) 龍頭本體	6":J Uj Y" & 閥體(含把手)	7":`Yl JVY<c gY" "( 不銹鋼軟管	8":8lj YfhYf" "% 切換閥	9":GdfUm" "% 噴槍	:":Ui Wh<c gY!ci hYh" "% 龍頭小軟管接頭	<":9gW hWYcb" "% (with gasket) 底座	=":7c bbYWrfk Jh" Z'hYf" "% (option) 過濾接頭(選購)